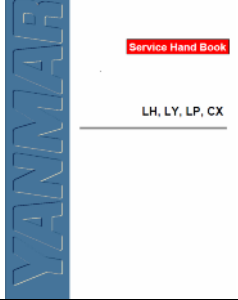 
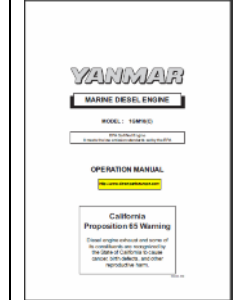 

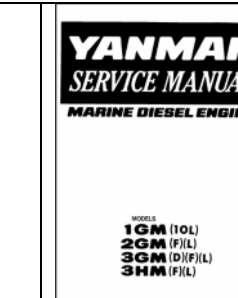 
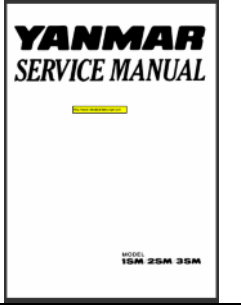 
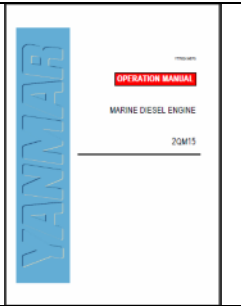 
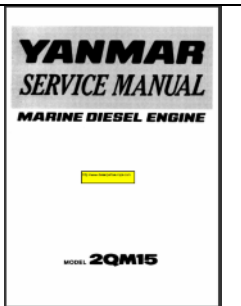 


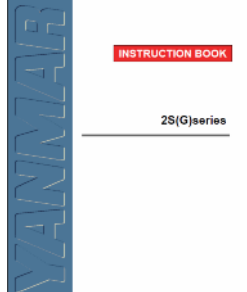 



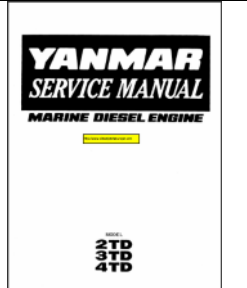 
YANMAR SERVICE AND PARTS MANUALS

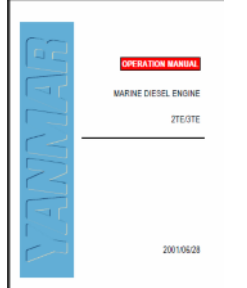 
0001	30	Service Handbook LH,LY,LP,CX Engine Service Hand Book 11-14-05 QSEG-FD-H002		P D F
0002	44	1 GM 10 Operation Manual		P D F
0003	463	Service Manuals 1 GM 10-2 GM 20,3 GM 30,3 HM 35		
0004	483	Service Manuals, L 1 GM 10 -2 GM,3 GM, 3 HM L – F – D		

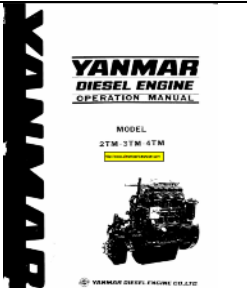 
0005	104	Service Manuals 1 SM – 2 SM – 3 SM	
0006	81	Operation Manual 2 QM 15 YT7802-34EFS	
0007	221	Service Manual 2 QM 15 0000A0A1002-8909 1989.9	
0008	34	Operation Manual 2 QM 20 , 3 QM 30 F – Y 78-124790-2E	
0009	350	Service Manual 2 QM 20 , 3 QM 30 H 0000A0A1003-9008 1990.8	

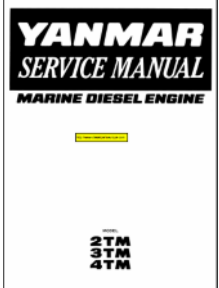 

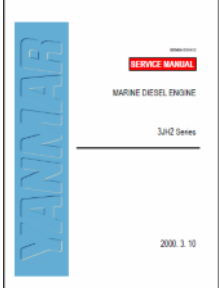 

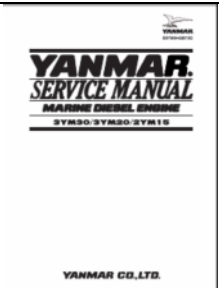 
0010	44	Instruction Book 2 S (G) Series	
------	----	--	---

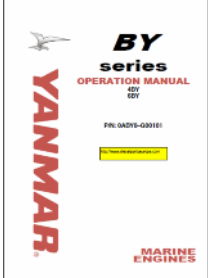 
0011	95	Service Manual 2 S	
------	----	-------------------------------------	---

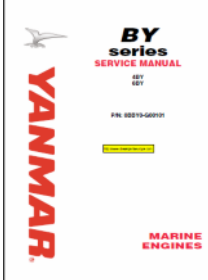 
0012	184	Service Manual 2 TD , 3 TD , 4 TD	
------	-----	--	--


0013	38	Operation Manual 2 TE , 3 TE 2001/06/28	
------	----	---	---

0014	32	Operation Manual 2 TM , 3 TM , 4 TM	
------	----	--	---

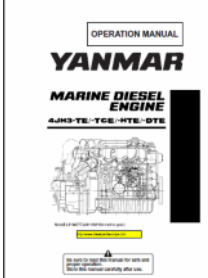 
0015	182	Service Manual 2 TM , 3 TM , 4 TM	
0016	233	Instalation Manual 3 YM 30 Jun.2006	
0017	308	Service Manual 3 JH 2 0000AOA1015-9112 2000.3.10	
0018	305	Service Manual 3 JH3 ,4 JH3, 4JH3CE1 HINSHI-H8009 2002.4	
0019	248	Service Manual 3 YM 30,3 YM 20,2YM15 0BYMM-G00100	

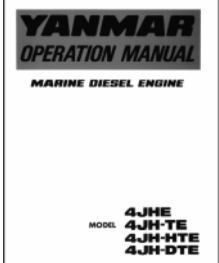 
0020	80	Operation Manual BY series – 4 BY,6BY 0ABY0-G00101	
------	----	---	---

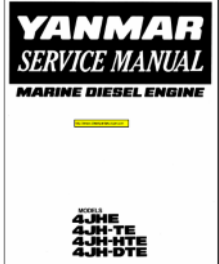 
0021	275	Service Manual BY Series – 4 BY,6BY 0BBY0-G00100	
------	-----	---	---

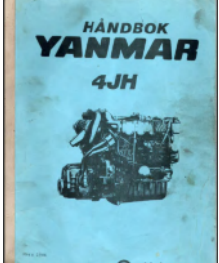 
0022	406	Service Manual 4JH2E,4JH2-TE, 4JH2-HTE,4JH2-DTE A0A1029-0104 2001.4	
------	-----	--	--

0023	100	Service Manual 4JH3-TE/HTE/DTE HINSI-H10-009 Aug/1998	
------	-----	--	---

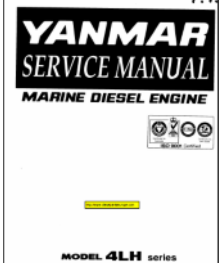 
0024	65	Operation Manual 4JH3- TE/TCE/HTE/DTE	
------	----	--	---

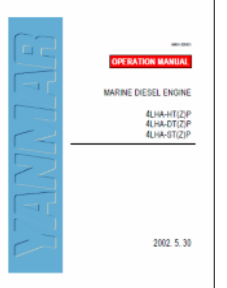 

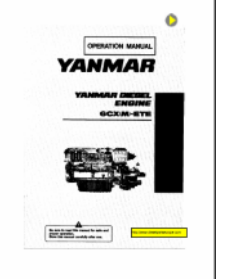 
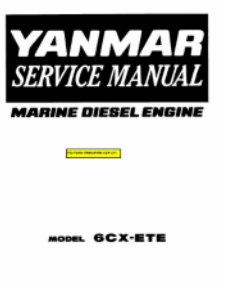 

0025	48	Operation Manual 4JHE,4JH-TE, 4JH-HTE,4JH-DTE	
------	----	--	---

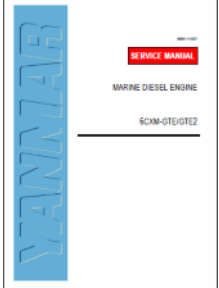 
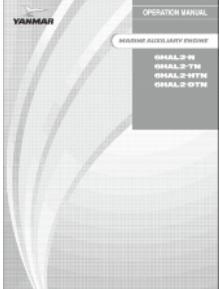 


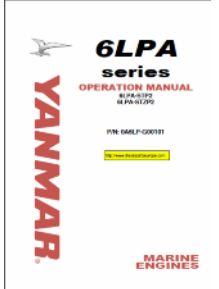 
0026	317	Service Manual 4JHE,4JH-TE, 4JH-HTE,4JH-DTE	
------	-----	--	---

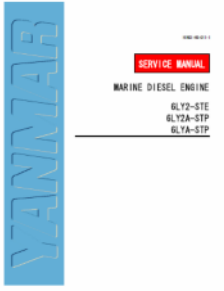 
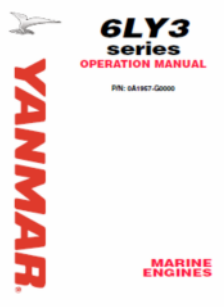 

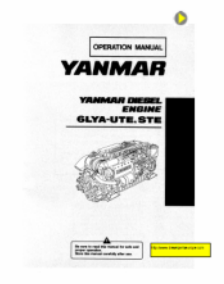 
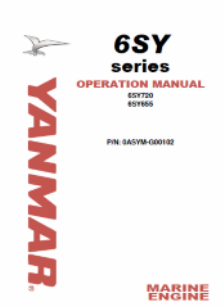 
0027	76	Service Manual 4JH March/1986	
------	----	---	--

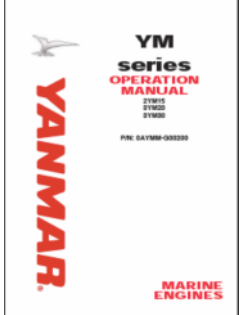 
0028	41	Operation Manual 4JM-TE	
------	----	--	---

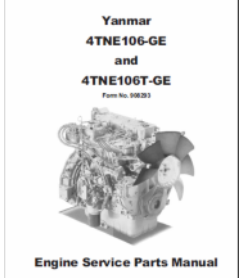 
0029	398	Service Manual 4LH Series	
------	-----	--	---

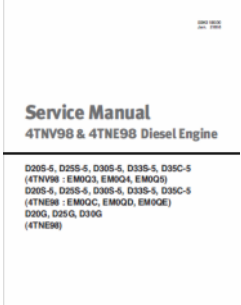 
0030	705	Operation Manual 4LHA-HT,4LHA-DT,4LHA-ST 49961-205431 2002.5.30	
0031	400	Service Manual 4LHA-STE, 4LHA-DTE,4LHA-HTE M9961-H11341	
0032	13	Operation Manual 6CX(M)-ETE	
0033	119	Service Manual 6CX-ETE	
0034	50	Operation Manual 6CXM-GTE2 49961-205100 2005/10/20	


0035	132	Service Manual 6CXM-GTE/GTE2 M9961-H13021	
0036	47	Operation Manual 6HAL2-N/TN/HTN/DTN 0A6HA-G00300 2010.02.23	
0037	57	Operation Manual 6LP- DTE/DTZE/STE/STZE 49961-302254	
0038	247	Service Manual 6LP-DTE/DTZE,6LPA- DTP/DTZP, 6LP-STE/STZE,6LPA- STP/STZP HINSHI-H10-001-2 2001.6	
0039	104	Operation Manual 6LPA Series 6LPA-STP2,6LPA- STZP2 2007/04/27	


<p><u>0040</u></p>	<p>234</p>	<p>Service Manual 6LY2-STE, 6LY2A-STP, 6LYA-STP HINSI-H8-011-1</p>	
<p>0041</p>	<p>136</p>	<p>Operation Manual 6 LY3 Series 0A1957-G0000 2005/10/20</p>	
<p>0042</p>	<p>120</p>	<p>Service Manual 6LY-UTE/STE HINSHI-H7004</p>	
<p>0043</p>	<p>7</p>	<p>Operation Manual 6LYA-UTE/STE</p>	
<p>0044</p>	<p>78</p>	<p>Operation Manual 6SY Series- 6SY720,6SY655 0ASYM-G00102 2007/03/08</p>	


0050	114	Operation Manual YM series 2YM15,3YM20,3YM30 0AYMM-G00200 2008/11/28	
------	-----	--	---


0051	50	Parts Manual 4TNE106-E, 4TNE106T-GE 908293 2001	
------	----	---	---

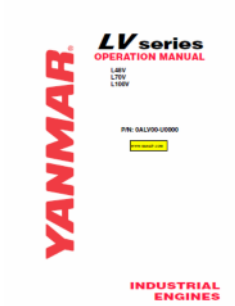 
0052	246	Service Manual 4TNV98,4TNE98 SB4319E00 Jan 2008	
------	-----	---	--

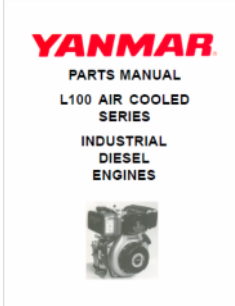 
0053	51	Parts Manual 4TNV84T-ZKTBL 917324 10/2009	
------	----	---	---

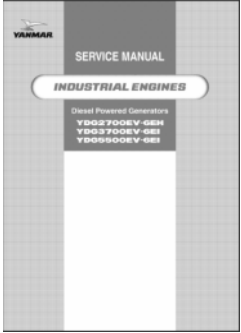 
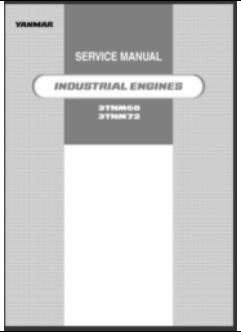 
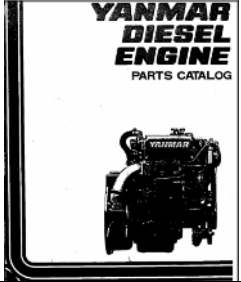 
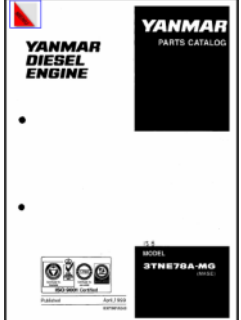 
0054	84	Parts Manual 4TNV98- YTBL,4TNV106T-XTBL 917086 12/2006	
------	----	--	---


0055	66	Parts Manual 4TNV98-ZNMS, 4TNV98T-ZNMS, 4TNV98-ZNTBL, 4TNV98T-ZNTBL 917304 09/2010	 <p>Yanmar 4TNV98-ZNMS 4TNV98T-ZNMS 4TNV98-ZNTBL 4TNV98T-ZNTBL Engines</p> <p>(P/Ns 192809, 192806, 362376, 341451, 196168, 196240)</p> <p>Mustang 2046/7686, 2700V and Gehl 5606406, V370 3500-Clear Loaders</p> <p>Gehl CTL6570 and Mustang HTL516320 Compact Truck Loaders</p> <p>ENGINE PARTS MANUAL</p>
------	----	---	---

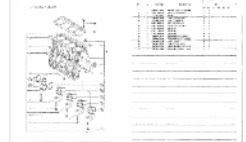 
0056	42	Parts Manual 3TNV82A-BPMS 917382 12/2008	 <p>Yanmar 3TNV82A-BPMS Engine</p> <p>(PN 195492) Gehl 1040E and Mustang 2012 Skid-Steer Loaders</p> <p>ENGINE PARTS MANUAL</p>
------	----	---	---

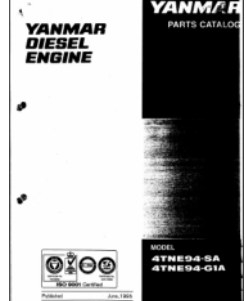 
0057	112	Operation Manual LV Series L 48V,L70V,L100V 0ALV00-U0000 2005	 <p>YANMAR</p> <p>LV series OPERATION MANUAL</p> <p>LIBRY L70V L100V</p> <p>P/N: 0ALV00-U0000</p> <p>INDUSTRIAL ENGINES</p>
------	-----	--	---


0058	21	Parts Manual L 100 000Y00R7120 Apr.2008	 <p>YANMAR</p> <p>PARTS MANUAL L100 AIR COOLED SERIES INDUSTRIAL DIESEL ENGINES</p>
------	----	--	---


0059	286	Service Manual YDG Series YDG2700EV-6EH, YDG3700EV-6EI, YDG5500EV-6EI 0BYDG-G00100 2007	
0060	280	Service Manual 3TNM68,3TNM72 0BTNM-G00100 2008	
0061	52	Parts Manual 1GM10LNE-G2 1983.08.18	
0062	47	Parts Manual 3TNE78A-MG April,1999	


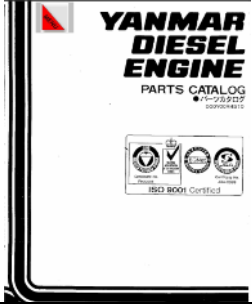 
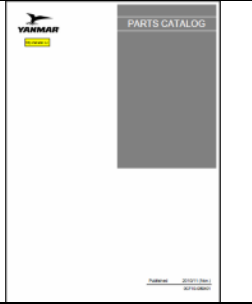 


0063	71	Parts Manual 4TNE88-SA01/04, 4TNE88-G1A01, 4TNE88-ESA01/05, 4TNE88-EG1A01/03 July,2001	
------	----	--	---

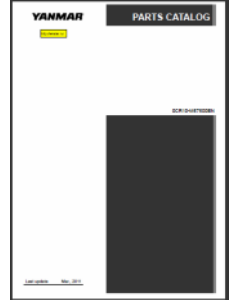 
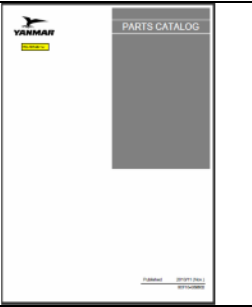 

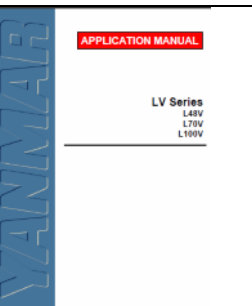 
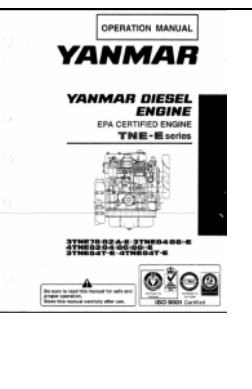 
0064	21	Parts Manual 4TNE98-SAG1A Y00R4580	
------	----	--	---






0065	48	Parts Manual 4TNE94-SA, 4TNE94-G1A 000Y00R4570 June 1996	
------	----	---	--


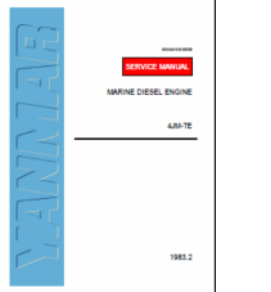 

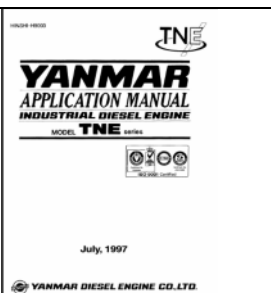 
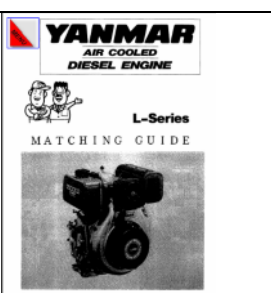 
<u>0066</u>	55	Parts Manual 3TNE88-SA,G1A Y00R4540 1995.04.25	
-----------------------------	----	---	---


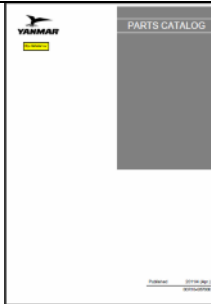 
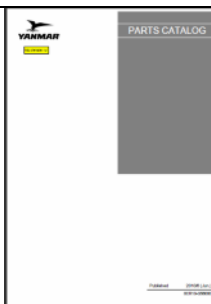 

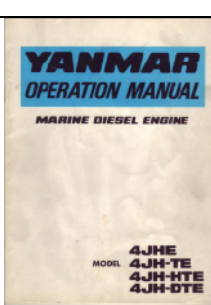 
<u>0067</u>	56	Parts Manual 3TNE82A-SA,G1A Y00R4530 1995.04.26	
-----------------------------	----	--	---


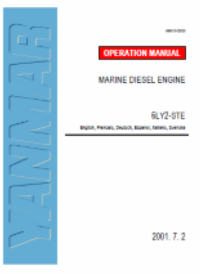 


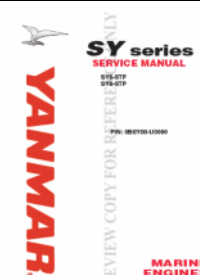 
<p><u>0068</u></p>	<p>51</p>	<p>Parts Manual 3TNE74-SA,G2A Y00R4520 1995.04.26</p>	
<p><u>0069</u></p>	<p>53</p>	<p>Parts Manual 3TNE68-SA,G1A,G2A Y00R4510 1995.04.26</p>	
<p><u>0070</u></p>	<p>119</p>	<p>Parts Manual 1 GM 10 (B.C.L) 000Y00R1355 Mar.1995</p>	
<p><u>0071</u></p>	<p>69</p>	<p>Parts Manual 2 GM 20C-YEU, 2 GM 20F-YEU OCR10-G47101 11.2010</p>	
<p><u>0072</u></p>	<p>23</p>	<p>Parts Manual 2 TNE 68C-EBG 0CV10-G74200 2009/6/Jun</p>	

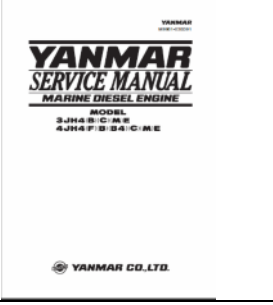 
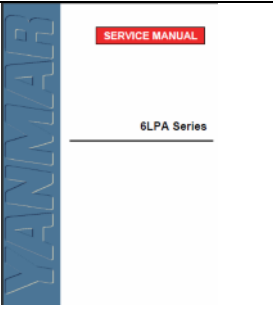 
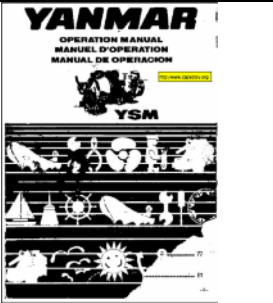 
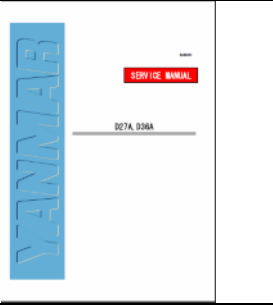 

<p><u>0073</u></p>	<p>26</p>	<p>Parts Manual 2TNV70-NBK, 2 TNV70-HGE December,2004 OCR10-M57500EN</p>	
<p><u>0074</u></p>	<p>127</p>	<p>Parts Manual 3 GM 30 (B,C,F) OCF10-G50602 2010/11/Nov</p>	
<p><u>0075</u></p>	<p>229</p>	<p>Application Manual TNV series 2,3,4 (70,82,84,88,94,98,106) 0DTNV-G00301</p>	
<p><u>0076</u></p>	<p>199</p>	<p>Application Manual LV Series L 48V, L 70V, L 100V 0DLV0-U00100 2007</p>	
<p><u>0077</u></p>	<p>52</p>	<p>Operation Manual TNE-E Series 3 TNE 78/82, 84/88,82/84/86/88, 4 TNE 84T, 49961-101630</p>	

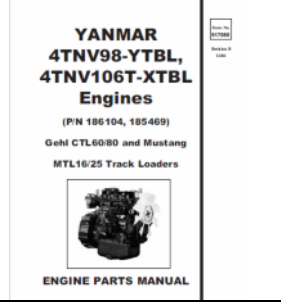 
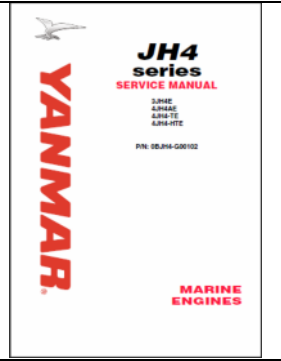 

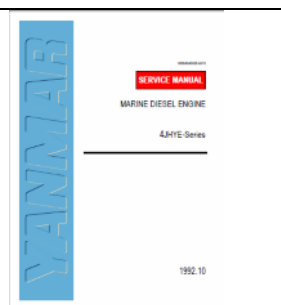 
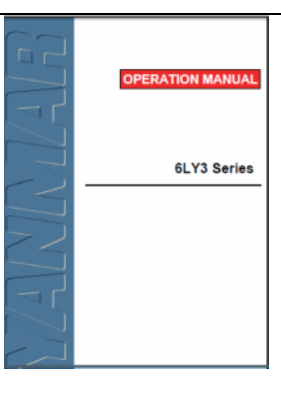 
<p><u>0078</u></p>	<p>241</p>	<p>Service Manual YSM 0000A0A1001-9008 1990.8</p>		
<p><u>0079</u></p>	<p>37</p>	<p>Service Manual YS 8/12</p>		
<p><u>0080</u></p>	<p>74</p>	<p>Service Manual SD 40/SD40-4T, SD50/SD50-4T M2215-04E140 April,2006</p>		
<p><u>0081</u></p>	<p>88</p>	<p>Service Manual SD 20,30,31 AOA5054</p>		
<p><u>0082</u></p>	<p>103</p>	<p>Service Manual 6LY-UTE 0000A5021-9206 1992.6</p>		

<p><u>0083</u></p>	<p>214</p>	<p>Service Manual 6 LYA-UTE,STE HINSHI-H8001</p>	
<p><u>0084</u></p>	<p>124</p>	<p>Service Manual 4 JM-TE 0000A011024 830209 1983.2</p>	
<p><u>0085</u></p>	<p>69</p>	<p>Service Manual SD40/SD40-4T M9961-H13030 2001.3</p>	
<p><u>0086</u></p>	<p>342</p>	<p>Application Manual TNE Series July.1997</p>	
<p><u>0087</u></p>	<p>45</p>	<p>Matching Guide L-Series</p>	

<p><u>0088</u></p>	<p>60</p>	<p>Operation Manual YM Series 2YM15/3YM20/3YM30 49961-206364 2004</p>	
<p><u>0089</u></p>	<p>48</p>	<p>Parts Manual 3 YM 20 000Y00R5700 Mar.2004</p>	
<p><u>0090</u></p>	<p>48</p>	<p>Parts Manual 3 YM 30 0CR10-G56000 2010/6/Jun</p>	
<p><u>0091</u></p>	<p>88</p>	<p>Operation Manual BY Series 4 BY2,6BY2 2008 0ABY0-G00200</p>	
<p><u>0092</u></p>	<p>47</p>	<p>Operation Manual 4 JHE,4 JH-TE, 4 JH-HTE,4 JH-DTE</p>	

<p><u>0093</u></p>	<p>28</p>	<p>Operation Manual YSE 8,12 YT7404-42EFS</p>		
<p><u>0094</u></p>	<p>317</p>	<p>Operation Manual 6 LY2-STE 499613-02820 2001.7.2</p>		
<p><u>0095</u></p>	<p>259</p>	<p>Service Manual TNE Series</p>		
<p><u>0096</u></p>	<p>127</p>	<p>Service Manual L-A Series</p>		
<p><u>0097</u></p>	<p>306</p>	<p>Service Manual SY Series SY6-STP,SY8-STP OBSY00-U0000</p>		

<p><u>0098</u></p>	<p>226</p>	<p>Service Manual 3 JH 4 (B/C/M), 4 JH 4 (F/B/B4/C/M) M9961-03E091</p>	
<p><u>0099</u></p>	<p>320</p>	<p>Service Manual 6 LPA Series 6 LPA-STP2, 6 LPA-STZP2 0B6LP-G00100</p>	
<p><u>0100</u></p>	<p>88</p>	<p>Operation Manual YSM YT7802-35EFS2 2001.6.28</p>	
<p><u>0101</u></p>	<p>143</p>	<p>Service Manual D 27A,D 36 A A0A5061</p>	
<p><u>0102</u></p>	<p>47</p>	<p>Operation Manual D 27 / D 36 Series Diesel</p>	

<p><u>0103</u></p>	<p>84</p>	<p>Parts Manual 4 TNV98-YTBL, 4 TNV106T-XTBL 917086 12/2006</p>	
<p><u>0104</u></p>	<p>392</p>	<p>Service Manual JH 4 Series 3 JH4E,4 JHAE, 4 JH4-TE,4 JH4-HTE 0BJH4-G00102 2007</p>	
<p><u>0105</u></p>	<p>51</p>	<p>Operation Manual 6 LY (M) – STE A0B5018</p>	
<p><u>0106</u></p>	<p>274</p>	<p>Service Manual 4 JHYE Series 0000A0A5025-9210 1992.10</p>	
<p><u>0107</u></p>	<p>121</p>	<p>Operation Manual 6 LY3 Series 6 LY3-ETP,6 LY3-STP, 6 LY3-UTP 0A1957-G0000</p>	

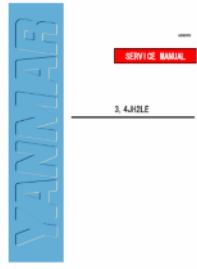 

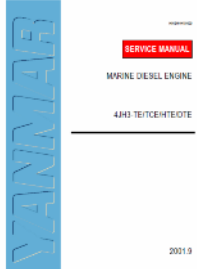 
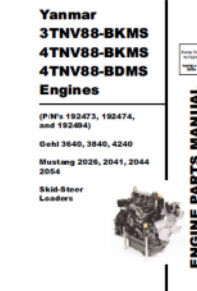 

<u>0108</u>	264	Service Manual 2 TNV 70,3 TNV 70, 3 TNV 76 February,2012	
-----------------------------	-----	--	--

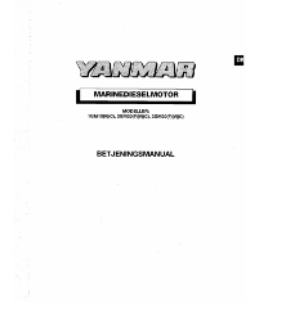 
<u>0109</u>	52	Parts Manual 3TNV88XMS/XMS2/GP 4TNV88XMS/XMS2/GP 917105 01/2007	
-----------------------------	----	--	--

<u>0110</u>	346	Service Manual 3 JH 4E/4JH4E/ 4JH4-TE/4JH4-HTE 0BJH4-G00100 February,2004	
-----------------------------	-----	--	--

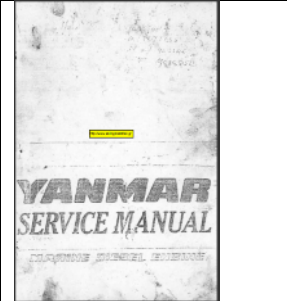 
<u>0111</u>	60	Instruction Book 4 LH Series	
-----------------------------	----	---	--

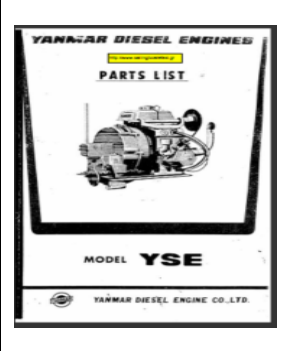 
<u>0112</u>	264	Service Manual 3 JH 2 Series	
-----------------------------	-----	---	--

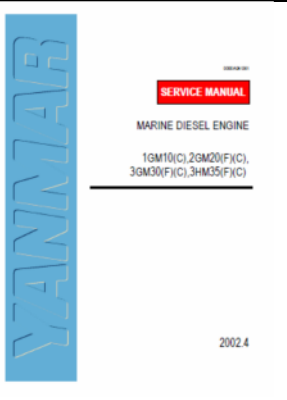 
<p><u>0113</u></p>	<p>213</p>	<p>Service Manual 3 , 4 JH2 LE A0A5053</p>	
<p><u>0114</u></p>	<p>49</p>	<p>Operation Manual 6 LYA-UTE/STE 499613-02060 1996.1.23</p>	
<p><u>0115</u></p>	<p>102</p>	<p>Service Manual 4 JH3- TE/TCE/HTE/DTE HINSHI-H10-009 2001.9</p>	
<p><u>0116</u></p>	<p>47</p>	<p>Parts Manual 3 TNV88-BKMS, 4 TNV88-BKMS, 4 TNV88-BDMS 917329 06/2008</p>	
<p>PDF</p>			
<p><u>0117</u></p>	<p>63</p>	<p>Service Manual SKE A0A1027</p>	
<p>PDF</p>			


<u>0123</u>	66	Operation Manual 1 GM 10 (V)(C), 2 GM 10 (F)(V)(C), 3 GM 10 (F)(V)(C)	
PDF			

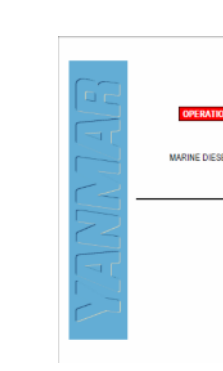 
<u>0124</u>	34	Operation Manual 2,3,4 TD 123340-E-830900	
PDF			

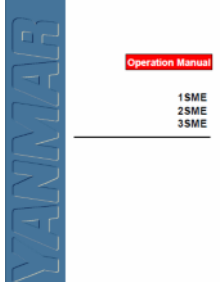 
<u>0125</u>	46	Service Manual YSE	
PDF			

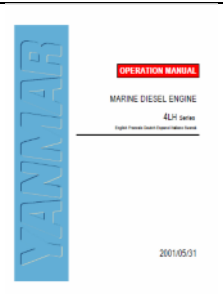 
<u>0126</u>	114	Parts Manual YSE	
PDF			

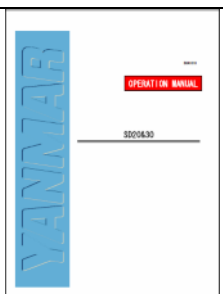 
<u>0127</u>	474	Service Manual 1 GM 10 (C), 2 GM 10 (F)(C), 3 GM 10 (F)(C), 3 HM 35 (F)(C)	
PDF			


<u>0128</u>	123	Service Manual SVE Series YT7708-194E	
PDF			

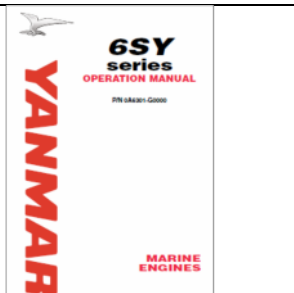 
<u>0129</u>	30	Operation Manual SKE Series YT7407-209ES 2001.7.3	
PDF			

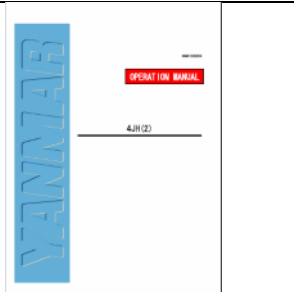 
<u>0130</u>	31	Operation Manual 1 SME,2 SME,3 SME	
PDF			


<u>0131</u>	375	Operation Manual 4 LH Series 2001/05/31	
PDF			

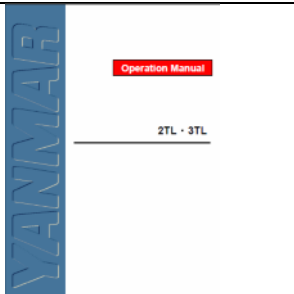 
<u>0132</u>	41	Operation Manual SD 20 & 30 B0A1010	
PDF			


<u>0133</u>	336	Service Manual 4 LHE 0000A0A1030-9202 2000.3.10	
PDF			

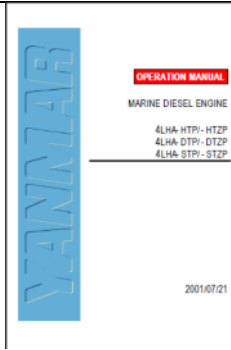 
<u>0134</u>	128	Operation Manual 6 SY Series 0A6301-G0000 2005	
PDF			

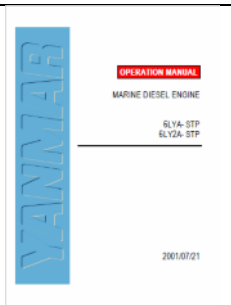 
<u>0135</u>	271	Operation Manual 4 JH (2) 49961200250	
PDF			

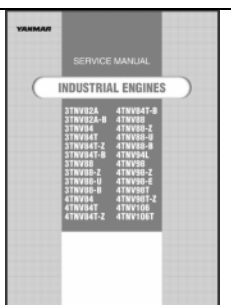 
<u>0136</u>	48	Operation Manual 3 JH3(B)E,3 JH3(C)E, 4 JH3(B)E,4 JH3(C)E 499613-02780	
PDF			

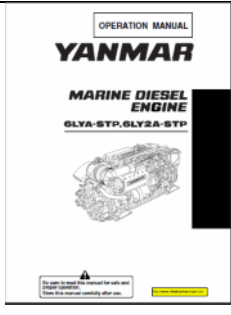 
<u>0137</u>	39	Operation Manual 2 TL – 3 TL	
PDF			


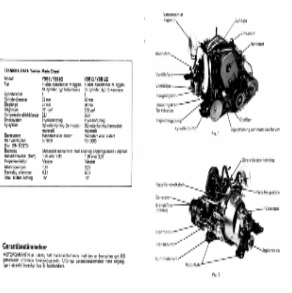 
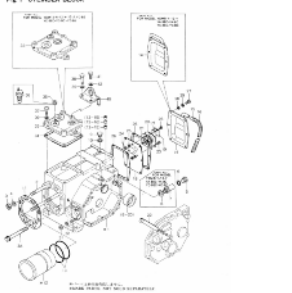 
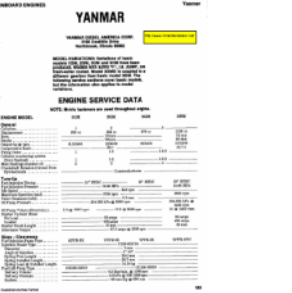 

<u>0138</u>	32	Operation Manual SVE 8,12 YT7412-191EFS	
PDF			

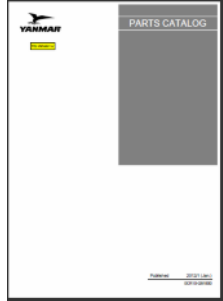 
<u>0139</u>	68	Operation Manual 4 LHA-HTP/HTZP, 4 LHA-DTP/DTZP, 4 LHA-STP/STZP 49961-205430 2001/07/21	
PDF			

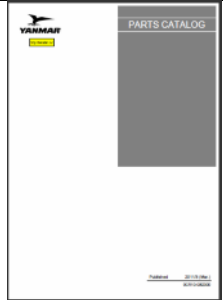 
<u>0140</u>	56	Operation Manual 6 LYA-STP 6 LY2A-STP 49961-205580 2001/07/21	
PDF			

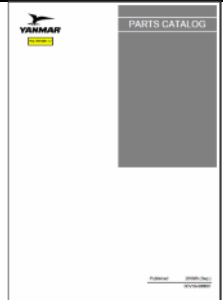 
<u>0141</u>	378	Service Manual 3 TNV 82/84/88 4 TNV 84/88/94/98/106 0BTNV-G00103 February 2012	
PDF			

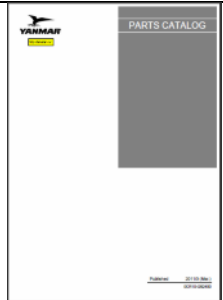 
<u>0142</u>	57	Operation Manual 6 LYA-STP, 6 LY2A-STP 49961-205581	
PDF			

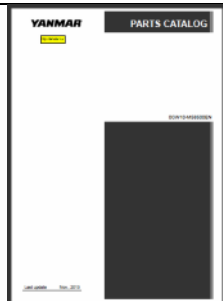 
<p><u>0143</u></p>	<p>318</p>	<p>Service Manual 4 JHE,4 JH-TE, 4 JH-HTE,4 JH-DTE 0000A0A1647</p>	
<p>PDF</p>			
<p><u>0144</u></p>	<p>18</p>	<p>Hand book YSB 8/12</p>	
<p>PDF</p>			
<p><u>0145</u></p>	<p>24</p>	<p>Parts Manual YSM 8/12</p>	
<p>PDF</p>			
<p><u>0146</u></p>	<p>18</p>	<p>Service Data 1 GM,2 GM,3 GM, 3 HM</p>	
<p>PDF</p>			
<p><u>0147</u></p>	<p>39</p>	<p>Parts Manual 3 TNE 74 OCR10-G45201 2012/1 (Jan)</p>	
<p>PDF</p>			

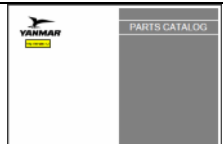 
<u>0148</u>	51	Parts Manual 3 TNE 78 OCR10-G51800 2012/1 (Jan)	
PDF			

<u>0149</u>	40	Parts Manual 3 TNE 84 OCR10-G52300 2011/3 (Mar)	
PDF			

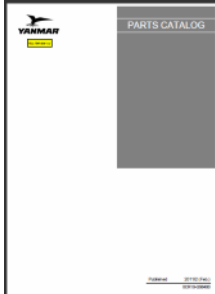 
<u>0150</u>	29	Parts Manual 3 TNE 84 MT-EK OCV10-G66601 2009/9 (Sep)	
PDF			

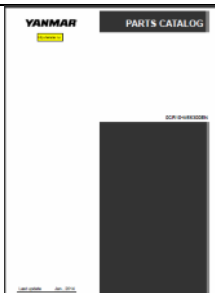 
<u>0151</u>	38	Parts Manual 3 TNE 88 OCR10-G52400 2011/3 (Mar)	
PDF			

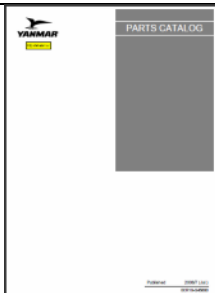 
<u>0152</u>	24	Parts Manual 3 TNV 76 OCW10-G58500 January.2010	
PDF			

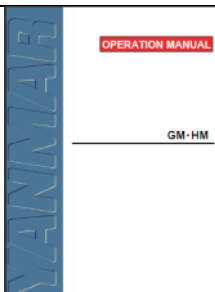 
<u>0153</u>	29	Parts Manual 3 TNV 82 A	
-----------------------------	-----------	--	---

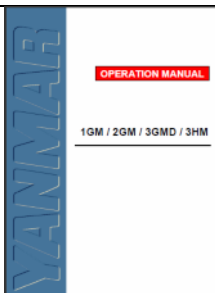 
PDF		OCR10-G56200 2010/10 (Oct)	
------------	--	--------------------------------------	--

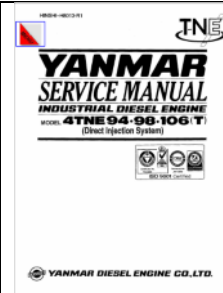 
<u>0154</u>	27	Parts Manual 3 TNV 88-DSA OCR10-G56400 2011/2 (Feb)	
PDF			

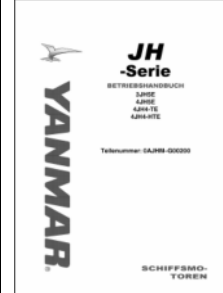 
<u>0155</u>	33	Parts Manual 3 TNV 84 T OCR10-M56300EN January 2004	
PDF			

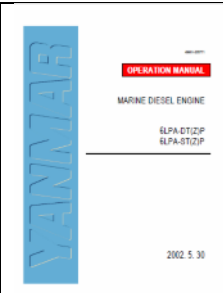 
<u>0156</u>	30	Parts Manual 4 TNE 98 OCR10-G45800 2008/7 (Jul)	
PDF			


<u>0157</u>	263	Operation Manual GM – HM	
PDF			

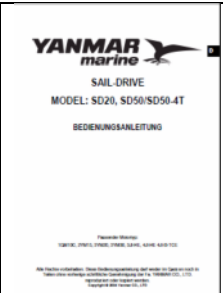 
<u>0158</u>	120	Operation Manual 1 GM/2 GM/3 GMD/ 3 HM	
PDF			

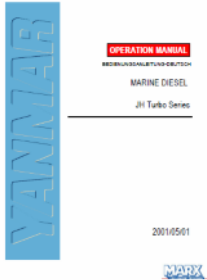 
<u>0159</u>	183	Service Manual 4 TNE 94/98/106 T HINSHI-H8013-R1	
PDF			


<u>0160</u>	172	Operation Manual 3 JH 5E, 4 JH 5E, 4 JH 4-TE, 4 JH 4-HTE 0AJHM-G00200 2009	
PDF			


<u>0161</u>	699	Operation Manual 6 LPA-DT(Z)P, 6 LPA-ST(Z)P 49961-205771 2002.5.30	
PDF			

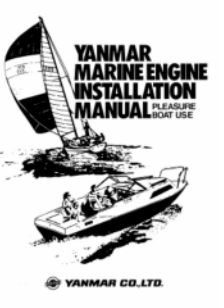 
<u>0162</u>	129	Operation Manual 6 LY 3 Series 0A1957-G0000 2005	
PDF			

<u>0163</u>	35	Operation Manual SD 20, SD 50/ SD50-4T 2004	
PDF			

<u>0164</u>	49	Operation Manual JH Turbo Series 49961-202850 2001/05/01	
PDF			

<u>0165</u>	54	Operation Manual 6 CXM-GTE2	
PDF			

<u>0166</u>	17	Parts Manual L 40 AE 0CV10-G75000 2011/1 (Jan)	
PDF			

<u>0167</u>	603	Installation Manual HINSI-H8010-R5 2011/1 (Jan)	
PDF			